


NUTMUTTERN DIN 981

NUTS FOR HOOK SPANNERS DIN 981

NUTMUTTERN DIN 981

NUTS FOR HOOK SPANNERS DIN 981

Artikel-Nr. Abmessung 

Article No. Dimensions 

1000000 KM 0 1

1000001 KM 1 1

1000002 KM 2 1

1000003 KM 3 1

1000004 KM 4 1

1000005 KM 5 1

1000006 KM 6 1

1000007 KM 7 1

1000008 KM 8 1

1000009 KM 9 1

1000010 KM 10 1

1000011 KM 11 1

1000012 KM 12 1

1000013 KM 13 1

1000014 KM 14 1

1000015 KM 15 1

1000016 KM 16 1

1000017 KM 17 1

1000018 KM 18 1

1000019 KM 19 1

1000020 KM 20 1

1000021 KM 21 1

1000022 KM 22 1

1000023 KM 23 1

1000024 KM 24 1

1000025 KM 25 1

1000026 KM 26 1

1000027 KM 27 1

1000028 KM 28 1

1000029 KM 29 1

1000030 KM 30 1

1000031 KM 31 1

1000032 KM 32 1


1000033 KM 33 1

1000034 KM 34 1

1000036 KM 36 1

1000038 KM 38 1

1000040 KM 40 1

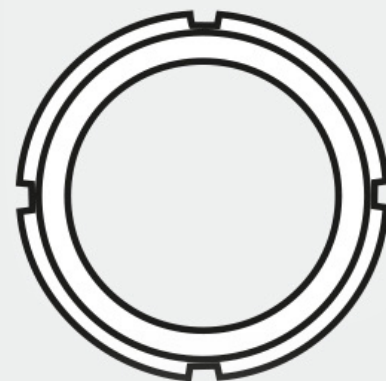

Sie haben Fragen oder benötigen Informationen?

Dann rufen Sie uns an oder schreiben Sie uns eine

E-Mail: info@krummundandre.de

Tel: +49-(0)2191-906 0 / Fax: +49-(0)2191-906-250



krumm&andré

Krumm & André GmbH & Co.KG

Blumentalstraße 2-4

D-42859 Remscheid